



User's Guide

**Compaq Evo Thin Client T20 and
Compaq T1010 Windows Based
Terminals**

Document Part Number: 250090-001

June 2001

© 2001 Compaq Computer Corporation

Compaq, the Compaq logo, Armada, Deskpro Registered in U. S. Patent and Trademark Office. Evo is a trademark of Compaq Information Technologies Group, L.P. in the United States and other countries.

ICA is a registered trademark and MetaFrame is a trademark of Citrix Systems, Inc.

Microsoft, MS-DOS, Windows, Windows CE, Windows NT, and Windows Terminal Server are trademarks of Microsoft Corporation in the United States and other countries.

All other product names mentioned herein may be trademarks of their respective companies.

Compaq shall not be liable for technical or editorial errors or omissions contained herein. The information in this document is provided “as is” without warranty of any kind and is subject to change without notice. The warranties for Compaq products are set forth in the express limited warranty statements accompanying such products. **Nothing herein should be construed as constituting an additional warranty.**

Compaq service tool software, including associated documentation, is the property of and contains confidential technology of Compaq Computer Corporation. Service customer is hereby licensed to use the software only for activities directly relating to the delivery of, and only during the term of, the applicable services delivered by Compaq or its authorized service provider. Customer may not modify or reverse engineer, remove, or transfer the software or make the software or any resultant diagnosis or system management data available to other parties without Compaq’s or its authorized service provider’s consent. Upon termination of the services, customer will, at Compaq’s or its service provider’s option, destroy or return the software and associated documentation in its possession.



CAUTION: Text set off in this manner indicates that failure to follow directions could result in damage to equipment or loss of information.



WARNING: Text set off in this manner indicates that failure to follow directions could result in bodily harm or loss of life.

Printed in the U.S.A.

User’s Guide

First Edition (June 2001)

Document Part Number: 250090-001

FCC Statement

This equipment has been tested and found to comply with the limits for either Class A or Class B digital devices (refer to “Terminal Requirements Compliance”), pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



CAUTION: Changes or modifications not covered in this manual must be approved in writing by the manufacturer's Regulatory Engineering department. Changes or modifications made without written approval may void the user's authority to operate the equipment.

Terminal Requirements Compliance

FCC Compliance

Compaq Evo Thin Client T20 and Compaq T1010 Windows Based Terminals meet Class B requirements.

The Low-Profile, Mid-Level MWBT and the High-Performance MWBT meet Class B requirements.

The Medium-Performance IWBT meets Class B requirements.

IEC/EN Compliance

Compaq Evo Thin Client T20 and Compaq T1010 Windows Based Terminals meet Class B requirements.

The Low-Profile, Mid-Level MWBT and the High-Performance MWBT meet Class B requirements.

The Medium-Performance IWBT meets Class B requirements.

Canadian DOC Notices

Refer to the previous section, “Terminal Requirements Compliance,” to find out to which terminal model each of the statements below refers.

Class A

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n’émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le Ministère des Communications du Canada.

Class B

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe B prescrites dans le Règlement sur le brouillage radioélectrique édicté par le Ministère des Communications du Canada.

IEC/EN Notice

This product conforms to the requirements of IEC950 and EN60950.

This product conforms to requirements of EN55022 for Class A equipment or EN55022 for Class B equipment (refer to "Terminal Requirements Compliance").

Compaq Evo Thin Client T20 and Compaq T1010 Windows Based Terminals

High-Performance MWBT and Medium-Performance IWBT

For use with External Power Supply DVE Model DSA-0301-05 or Potrans Model UP01811050A or certified equivalent model supplied by the manufacturer, rated minimum 5V/4A.

Noise Suppressor

A noise suppressor (ferrite bead) must be installed on the network cable of your terminal. This installation is necessary to maintain compliance with U.S. FCC B limits and European CISPR B EN55022 Class B limits. The noise suppressor is supplied by the manufacturer and is packed in your terminal's shipping carton.

Cable Notice

The use of shielded I/O cables is required when connecting this equipment to any and all optional peripheral or host devices. Failure to do so may cause interference and violate FCC and international regulations for electromagnetic interference.

License Agreement

YOU SHOULD CAREFULLY READ THE FOLLOWING TERMS AND CONDITIONS BEFORE USING THIS SOFTWARE (TOGETHER WITH ANY SUPPLIED DOCUMENTATION, HEREAFTER "SOFTWARE"), WHICH IS OWNED BY THE MANUFACTURER OR ITS LICENSORS. USING THIS SOFTWARE INDICATES YOUR ACCEPTANCE OF THE FOLLOWING TERMS AND CONDITIONS. THE MANUFACTURER'S LICENSORS ARE INTENDED THIRD-PARTY BENEFICIARIES UNDER THIS AGREEMENT.

Grant

You may use the Software in or in conjunction with Your manufacturer-produced hardware (Terminal). You have the right to use this Software by loading it onto a computer containing the capability of transferring the Software (in whole or in part) to the manufacturer-produced hardware. You may use the Software in this fashion as many times as necessary, so long as such use is always in conjunction with the manufacturer-produced Terminal. You may transfer ownership of the Terminal and equipment, including the right to use the Software to another party so long as that party agrees to accept these terms and conditions.

YOU MAY NOT USE, COPY, MODIFY, TRANSLATE OR TRANSFER THE SOFTWARE, OR MODIFICATION THEREOF, IN WHOLE OR IN PART, EXCEPT AS EXPRESSLY PROVIDED FOR IN THIS LICENSE. YOU MAY NOT DECOMPILE, REVERSE ENGINEER OR OTHERWISE DECODE OR ALTER THE SOFTWARE.

Disclaimer of Warranty

This Software is provided, “AS IS”, and is delivered with no warranties, either express or implied.

MANUFACTURER MAKES AND YOU RECEIVE NO WARRANTIES ON THE FIRMWARE, EXPRESS, IMPLIED, OR STATUTORY, OR IN ANY OTHER PROVISION OF THIS AGREEMENT OR COMMUNICATION WITH YOU, AND MANUFACTURER DISCLAIMS ANY IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT AND FITNESS FOR ANY PARTICULAR PURPOSE. MANUFACTURER DOES NOT WARRANT THAT THE FUNCTIONS CONTAINED IN THE PRODUCT WILL MEET YOUR REQUIREMENTS OR THAT THE OPERATION WILL BE UNINTERRUPTED OR ERROR FREE.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

Limit of Liability

UNDER NO CIRCUMSTANCES SHALL MANUFACTURER BE LIABLE FOR LOSS OF DATA, COST OF COVER, OR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY. THESE LIMITATIONS SHALL APPLY EVEN IF MANUFACTURER OR ITS RESELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, AND NOTWITHSTANDING ANY FAILURE OF ESSENTIAL PURPOSE OF ANY LIMITED REMEDY PROVIDED HEREIN.

YOU AGREE THAT THESE ARE THE ONLY APPLICABLE TERMS OF AGREEMENT BETWEEN US COVERING SOFTWARE AND THAT THEY SUPERSEDE ANY OTHER COMMUNICATIONS (ORAL OR WRITTEN) BETWEEN US RELATING TO THE SOFTWARE.

Export Restrictions

You agree You will not export or transmit the Software to any country to which export is restricted by applicable U.S. law or regulation without the written approval of the appropriate U.S. Government organization.

U.S. Government Restricted Rights

The Software is provided with RESTRICTED RIGHTS. Use, duplication or disclosure by the Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technological Data and computer software clause at DFARS 252.227-7013 or in subparagraphs (c)(1) and (2) of the Commercial Computer Software-Restricted Rights at 8 C.F.R. 52-227-19 as applicable.

EULA for Microsoft® Windows® CE Operating System for Windws-based Terminal Devices

IMPORTANT—READ CAREFULLY

This End User License Agreement (EULA) is a legal agreement between you (either an individual or a single entity) and the manufacturer (MANUFACTURER) of the special purpose computing device (SYSTEM) you acquired which includes certain Microsoft software product(s) installed on the SYSTEM and/or included in the SYSTEM package (SOFTWARE). The SOFTWARE includes computer software, the associated media, any printed materials, and any online or electronic documentation. By installing, copying or otherwise using the SOFTWARE, you agree to be bound by the terms of this EULA. If you do not agree to the terms of this EULA, MANUFACTURER and Microsoft Licensing, Inc. (MS) are unwilling to license the SOFTWARE to you. In such event, you may not use or copy the SOFTWARE, and you should promptly contact MANUFACTURER for instructions on return of the unused product(s) for a refund.

Software License

The SOFTWARE is protected by copyright laws and international copyright treaties, as well as other intellectual property laws and treaties. The SOFTWARE is licensed, not sold.

1. Grant of License

SOFTWARE includes software already installed on the SYSTEM (SYSTEM SOFTWARE) and, if included in the SYSTEM package, software contained on the CD-ROM disk and/or floppy disk(s) labeled “Desktop Software for Microsoft Windows CE” (DESKTOP SOFTWARE). This EULA grants you the following rights to the SOFTWARE:

❑ **SYSTEM SOFTWARE**

You may use the SYSTEM SOFTWARE only as installed in the SYSTEM.

❑ **DESKTOP SOFTWARE**

DESKTOP SOFTWARE might not be included with your SYSTEM. If DESKTOP SOFTWARE is included with your SYSTEM, you may install and use the component(s) of the DESKTOP SOFTWARE in accordance with the terms of the end user license agreement provided with such component(s). In the absence of a separate end user license agreement for particular component(s) of the DESKTOP SOFTWARE, you may install and use only one (1) copy of such component(s) on a single computer with which you use the SYSTEM.

❑ **Use of Windows CE Operating System for Windows-based Terminal Devices with Microsoft Windows NT Server, Terminal Server Edition**

If the SOFTWARE is Windows CE operating system for Windows-based Terminal devices, the following special provisions apply. In order to use the SYSTEM in connection with Windows NT Server, Terminal Server Edition, you must possess (1) a Client Access License for Windows NT Server, Terminal Server Edition and (2) an end user license for Windows NT Workstation or an end user license agreement for Windows NT Workstation for Windows-based Terminal Devices (please refer to the end user license agreement for Windows NT Server, Terminal Server Edition for additional information).

MANUFACTURER may have included a Certificate of Authenticity for Windows NT Workstation for Windows-based Terminal Devices with the SYSTEM. In that case, this EULA constitutes an end user license for the version of Windows NT Workstation for Windows-based Terminal Devices indicated on such Certificate of Authenticity.

❑ **Back-up Copy**

If MANUFACTURER has not included a back-up copy of the SYSTEM SOFTWARE with the SYSTEM, you may make a single back-up copy of the SYSTEM SOFTWARE. You may use the back-up copy solely for archival purposes.

2. Description of Other Rights and Limitations

☐ **Speech/Handwriting Recognition**

If the SYSTEM SOFTWARE includes speech and/or handwriting recognition component(s), you should understand that speech and handwriting recognition are inherently statistical processes; that recognition errors are inherent in the processes; that it is your responsibility to provide for handling such errors and to monitor the recognition processes and correct any errors. Neither MANUFACTURER nor its suppliers shall be liable for any damages arising out of errors in the speech and handwriting recognition processes.

☐ **Limitations on Reverse Engineering, Decompilation and Disassembly**

You may not reverse engineer, decompile, or disassemble the SYSTEM SOFTWARE, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.

☐ **Single SYSTEM**

The SYSTEM SOFTWARE is licensed with the SYSTEM as a single integrated product. The SYSTEM SOFTWARE installed in Read Only Memory (ROM) of the SYSTEM may only be used as part of the SYSTEM.

☐ **Single EULA**

The package for the SYSTEM SOFTWARE may contain multiple versions of this EULA, such as multiple translations and/or multiple media versions (e.g., in the user documentation and in the software). Even if you receive multiple versions of the EULA, you are licensed to use only one (1) copy of the SYSTEM SOFTWARE.

☐ **Rental**

You may not rent or lease the SOFTWARE.

❑ **Software Transfer**

You may permanently transfer all of your rights under this EULA only as part of a sale or transfer of the SYSTEM, provided you retain no copies, you transfer all of the SOFTWARE (including all component parts, the media, any upgrades or backup copies, this EULA and, if applicable, the Certificate(s) of Authenticity), and the recipient agrees to the terms of this EULA. If the SOFTWARE is an upgrade, any transfer must include all prior versions of the SOFTWARE.

❑ **Termination**

Without prejudice to any other rights, MANUFACTURER or MS may terminate this EULA if you fail to comply with the terms and conditions of this EULA. In such event, you must destroy all copies of the SOFTWARE and all of its component parts.

3. Upgrades

If the SYSTEM SOFTWARE and this EULA are provided separate from the SYSTEM by MANUFACTURER and the SYSTEM SOFTWARE is on a ROM chip, CD ROM disk(s) or floppy disk(s), and labeled “For ROM Upgrade Purposes Only” (“ROM Upgrade”), you may install one copy of the ROM Upgrade onto the SYSTEM as a replacement copy for the SYSTEM SOFTWARE originally installed on the SYSTEM and use it in accordance with Section 1 of this EULA.

4. Copyright

All title and copyrights in and to the SOFTWARE (including but not limited to any images, photographs, animations, video, audio, music, text and “applets,” incorporated into the SOFTWARE), the accompanying printed materials, and any copies of the SOFTWARE, are owned by MS or its suppliers (including Microsoft Corporation). You may not copy the printed materials accompanying the SOFTWARE. All rights not specifically granted under this EULA are reserved by MS and its suppliers (including Microsoft Corporation).

5. Product Support

Product support for the SOFTWARE is not provided by MS, its parent corporation, Microsoft Corporation, or their affiliates or subsidiaries. For product support, please refer to MANUFACTURER’s support number provided in the documentation for the SYSTEM. Should you have any questions concerning this EULA, or if you desire to contact MANUFACTURER for any other reason, please refer to the address provided in the documentation for the SYSTEM.

6. Export Restrictions

You agree that you will not export or re-export the SOFTWARE to any country, person, or entity subject to U.S. export restrictions. You specifically agree not to export or re-export the SOFTWARE: (i) to any country to which the U.S. has embargoed or restricted the export of goods or services, which as of March 1998 include, but are not necessarily limited to Cuba, Iran, Iraq, Libya, North Korea, Sudan and Syria, or to any national of any such country, wherever located, who intends to transmit or transport the products back to such country; (ii) to any person or entity who you know or have reason to know will utilize the SOFTWARE or portion thereof in the design, development or production of nuclear, chemical or biological weapons; or (iii) to any person or entity who has been prohibited from participating in U.S. export transactions by any federal agency of the U.S. government.

If the SOFTWARE is labeled “North America Only Version” above, on the Product Identification Card, or on the SOFTWARE packaging or other written materials, then the following applies: The SOFTWARE is intended for distribution only in the United States, its territories and possessions (including Puerto Rico, Guam, and U.S. Virgin Islands) and Canada. Export of the SOFTWARE from the United States is regulated under “EI controls” of the Export Administration Regulations (EAR, 15 CFR 730-744) of the U.S. Commerce Department, Bureau of Export Administration (BXA). A license is required to export the SOFTWARE outside the United States or Canada. You agree that you will not directly or indirectly, export or re-export the SOFTWARE (or portions thereof) to any country, other than Canada, or to any person or entity subject to U.S. export restrictions without first obtaining a Commerce Department export license. You warrant and represent that neither the BXA nor any other U.S. federal agency has suspended, revoked or denied your export privileges.

7. Note on Java Support

The SYSTEM SOFTWARE may contain support for programs written in Java. Java technology is not fault tolerant and is not designed, manufactured, or intended for use or resale as on-line control equipment in hazardous environments requiring fail-safe performance, such as in the operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, direct life support machines, or weapons systems, in which the failure of Java technology could lead directly to death, personal injury, or severe physical or environmental damage.

8. Limited Warranty

❑ Limited Warranty

MANUFACTURER warrants that the SOFTWARE will perform substantially in accordance with the accompanying written materials for a period of ninety (90) days from the date of receipt. Any implied warranties on the SOFTWARE are limited to ninety (90) days. Some states/jurisdictions do not allow limitations on duration of an implied warranty, so the above limitation may not apply to you.

❑ Customer Remedies

MANUFACTURER'S and its suppliers' entire liability and your exclusive remedy shall be, at MANUFACTURER'S option, either (a) return of the price paid, or (b) repair or replacement of the SOFTWARE that does not meet the above Limited Warranty and which is returned to MANUFACTURER with a copy of your receipt. This Limited Warranty is void if failure of the SOFTWARE has resulted from accident, abuse, or misapplication. Any replacement SOFTWARE will be warranted for the remainder of the original warranty period or thirty (30) days, whichever is longer.

❑ No Other Warranties

EXCEPT AS EXPRESSLY PROVIDED IN THE LIMITED WARRANTY SECTION ABOVE, THE SOFTWARE IS PROVIDED TO THE END USER "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, AND/OR FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK OF THE QUALITY AND PERFORMANCE OF THE SOFTWARE IS WITH YOU.

❑ **No Liability for Consequential Damages**

MANUFACTURER OR MANUFACTURER'S SUPPLIERS, INCLUDING MS AND ITS SUPPLIERS, SHALL NOT BE HELD TO ANY LIABILITY FOR ANY DAMAGES SUFFERED OR INCURRED BY THE END USER (INCLUDING, BUT NOT LIMITED TO, GENERAL, SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES INCLUDING DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION AND THE LIKE), ARISING FROM OR IN CONNECTION WITH THE DELIVERY, USE OR PERFORMANCE OF THE SOFTWARE.

If you acquired this EULA in the United States, this EULA is governed by the laws of the State of Washington.

If you acquired this EULA in Canada, this EULA is governed by the laws of the Province of Ontario, Canada. Each of the parties hereto irrevocably attorns to the jurisdiction of the courts of the Province of Ontario and further agrees to commence any litigation which may arise hereunder in the courts located in the Judicial District of York, Province of Ontario.

If this EULA was acquired outside the United States, then local law may apply.

Should you have any questions concerning this EULA, please contact the MANUFACTURER of your SYSTEM.

U.S. GOVERNMENT RESTRICTED RIGHTS

The SOFTWARE and documentation are provided with RESTRICTED RIGHTS. Use, duplication, or disclosure by the Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 or subparagraphs (c)(1) and (2) of the Commercial Computer Software—Restricted Rights at 48 CFR 52.227- 19, as applicable. MANUFACTURER is Microsoft Corporation/One Microsoft Way/Redmond, WA 98052-6399.

Contents

About the User's Guide

Guide Overview	xxi
Guide Conventions	xxii
Text Format	xxii
User Interface Menu Control	xxiii

1 Introduction

Introducing the Compaq Evo Thin Client T20 and Compaq T1010 Windows Based Terminal	1-1
Models Summary	1-1
Compaq Evo Thin Client T20	1-2
Compaq T1010 Windows Based Terminal	1-3
Compaq Thin Client Terminal Features	1-5

2 General Terminal Information

Logging On	2-1
Access Levels	2-2
Version and Copyright Information	2-5
Network Information	2-6

3 Display Configuration

Display Screen Resolution	3-1
Energy Savers	3-4

4 Keyboard and Mouse Configuration

Keyboard	4-2
Mouse.....	4-4

5 Managing Connections

Configuring a Connection	5-1
Making a Connection.....	5-1
Ending a Connection	5-2
Shutting Down the Terminal	5-3

6 Browser Configuration

Adding a Browser Connection.....	6-2
----------------------------------	-----

7 Multiple Sessions

Setting Up Multiple Sessions.....	7-1
Managing Multiple Sessions	7-1
Manipulating Multiple Sessions.....	7-2

8 Getting Help

Troubleshooting Your Terminal	8-1
-------------------------------------	-----

Index

About the User's Guide

The Compaq *Evo* Thin Client T20 and Compaq T1010 Windows Based Terminals Users Guide contains the information you will need to use and troubleshoot a WBT (Windows-based Terminal). This guide is written primarily for desktop users and covers the Evo Thin Client T20 and T1010 Windows Based Terminal.

Guide Overview

The users guide consists of the following chapters:

- Introducing the Compaq *Evo* Thin Client T20 and Compaq T1010 Windows Based Terminal
- General Terminal Information
- Display Configuration
- Integrated Terminal Monitor Adjustments
- Keyboard and Mouse Configuration
- Managing Connections
- Browser Configuration
- Multiple Sessions
- Getting Help

This guide contains information about:



- WBT features and management
- The user interface

Guide Conventions

Text Format

Table 1 lists the text format conventions used in this document.

Table 1: Text Format

Convention	Where Used
<i>Italic</i>	New term, book title, or emphasis.
Bold	Screen display, keycaps, and user input.
	Indicates a note. A note adds information.
	Indicates a caution. A caution indicates actions that may cause damage to equipment, erase files, or destroy data.
+	Keystroke sequences such as: Ctrl+Alt+Del
 	Instructions about invoking a menu such as: Network SNMP Network Location

User Interface Menu Control

Table 2 describes the command buttons used for user interface menu control on a Compaq *Evo* Thin Client T20 and Compaq T1010 Windows Based Terminal

Table 2: User Interface Menu Control

Command Button	Function
X	Found in the upper right corner of a dialog box. Click on this command button to quit a dialog box or properties sheet without saving changes.
OK	Found in dialog boxes and on properties sheets. Click on this command button to save your changes and quit a dialog box or properties sheet.
Cancel	Found in dialog boxes and on properties sheets. Click on this command button at any time to quit a dialog box or properties sheet without saving changes.
Apply	Found in dialog boxes and on properties sheets. Click on this command button to save changes without quitting a dialog box or properties sheet. This command button is sometimes not activated.
Next or Accept	Found in wizards. Click on these command buttons to display the next dialog box in the sequence.
Back	Found in wizards. Click on this command button to return to the previous dialog box.
Finish	Found in wizards. Click on this command button to finish the wizard.

Introduction

Introducing the Compaq *Evo* Thin Client T20 and Compaq T1010 Windows Based Terminal

Compaq *Evo* Thin Client T20 and Compaq T1010 Windows Based Terminals are terminals that display windows rather than the classic text-based display. They are designed to connect to Windows 2000 servers via RDP (Remote Desktop Protocol), to Windows NT servers via ICA (Independent Computing Architecture), or to legacy servers using various terminal emulations such as TN3270 or TN5250.

RDP is the Windows CE-based presentation service protocol for connecting to Windows terminal servers. ICA is the presentation service protocol for Windows NT servers. Both allow an application's user interface to execute on a Windows-based terminal while the application's logic executes on the server.

Models Summary

All Compaq *Evo* Thin Client T20 and Compaq T1010 Windows Based Terminals with at least 8 MB of RAM are supported by version 3.5 of the terminal software.



Monitors are not provided with Compaq *Evo* Thin Client T20 and Compaq T1010 Windows Based Terminals.

Compaq *Evo* Thin Client T20

The *Evo* Thin Client T20 terminal is a modular-type terminal. The connections for peripherals such as the monitor, keyboard, and mouse are on the back of the terminal. The following figures show a Compaq *Evo* Thin Client T20 modular terminal and its connectors.



Figure 1: *Evo* Thin Client T20



Figure 2: Evo Thin Client T20 Connections

The following items are provided with Compaq *Evo* Thin Client T20 terminals:

- Power supply
- Power cord
- Keyboard
- Mouse
- Installation and user information

Compaq T1010 Windows Based Terminal

The Compaq T1010 Windows Based Terminal is a high-performance modular-type terminal. The connections for peripherals such as the monitor, keyboard, and mouse are on the back of the terminal. The following figures show a T1010 modular terminal and its connectors.

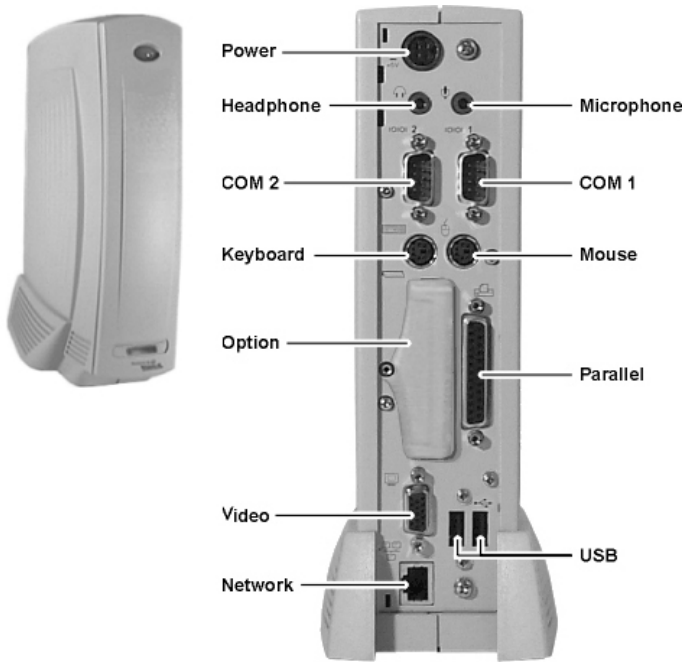 


Figure 3: Compaq T1010 Windows Based Terminal

The following items are provided with Compaq T1010 terminals:

- Power supply
- Power cord
- Keyboard
- Mouse
- Installation and user information

Compaq Thin Client Terminal Features

Each terminal comes with its own set of features. The following table outlines these features.

Table 1–1: Terminal Features

Feature	Compaq Evo Thin Client T20	T1010 Windows Based Terminal
Windows 3.1, Windows 95, Windows 98, and Windows NT applications via Windows 2000	x	x
RDP and ICA 3.x application compliant	x	x
ICA server connections via serial cable		x
10Base-T network communications	x	x
100Base-T network communications	x	x
Dual high-speed serial ports		x
Parallel printer port		x
Single USB port		x
Four USB ports	x	
Optional touch screen support	x	x
Support for monochrome or color monitor	x	x
Support for PCMCIA modem		x
Print Spooling	x	x
Secure RDP & ICA	x	x
Media Player	x	x

Table 1–1: Terminal Features (*Continued*)

Feature	Compaq Evo Thin Client T20	T1010 Windows Based Terminal
16-bit color support	x	x
PCMCIA support for CISCO Aironet™ Wireless Ethernet Card		x
Network Time Services	x	x
Microsoft Internet Explorer 4 support	x	x

General Terminal Information

Logging On

When you turn on your terminal the Terminal Login dialog box (see Figure 1) displays, unless your system administrator has configured your terminal for automatic login with your User Name and Password. Type in your user name and password then click the OK button.



Figure 1: Terminal Login Dialog Box

If your terminal has been configured for automatic login, the **Connection Manager** (see Figure 5) is the first screen you will see after turning on your terminal. From the connection manager press **F2** to display the **Terminal Properties** dialog box.

Two of the properties sheets in this dialog box provide general information about your terminal. They are the **General** properties sheet and the **SysInfo** properties sheet. The following paragraphs discuss these properties sheets.

Access Levels

The terminal allows three different levels of access: Administrator, User, and Guest. These levels are assigned to specific User Names by your System Administrator.

Each access level grants certain rights to the user according to the level specified, Administrator having total access and control over all functions of the terminal, User having control over all except the Security functions, and Guest having minimal rights.

The following figures show the Terminal Properties available to each kind of user.


 
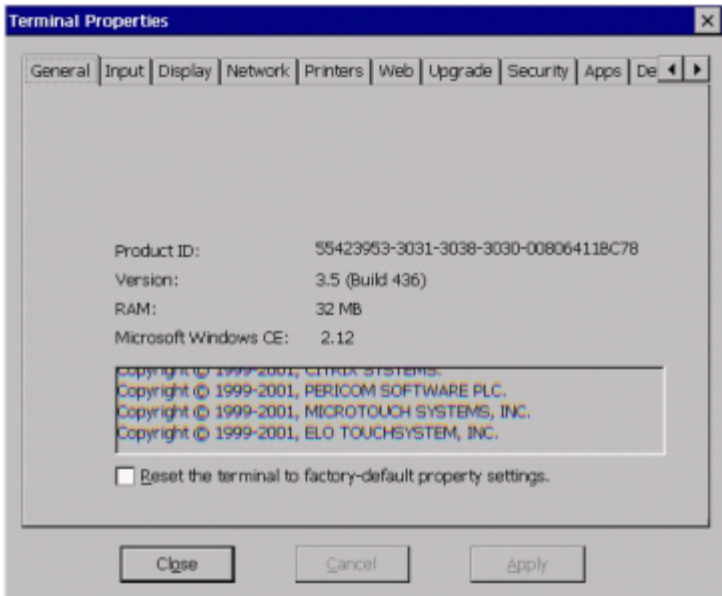 


Figure 2: Administrator-Level Terminal Properties Screen

**Figure 3: User-Level Terminal Properties Screen****Figure 4: Guest-Level Terminal Properties Screen**

Additionally the Configure tab in the Connection Manager window is only available to Administrator level users.

 Information regarding the use of Administrator-level functions is available in the Administrators Guide.

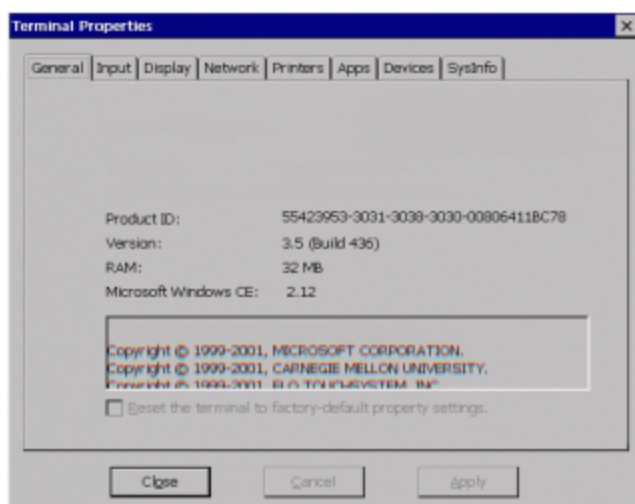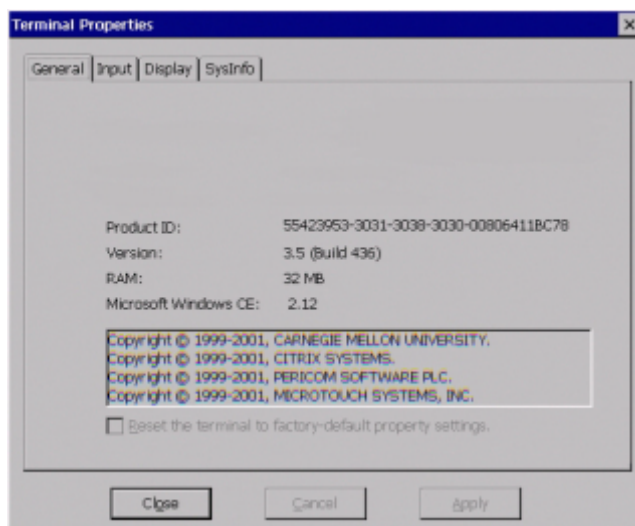

If you turn on your terminal and the **Setup Wizard** displays, contact your system administrator. If you are a system administrator, see the *Administrators Guide*.



For more information about the **Terminal Properties** dialog box, see your system administrator. If you are a system administrator, see the *Compaq Evo Thin Client T20 and Compaq T1010 Windows Based Terminal Administrators Guide*.

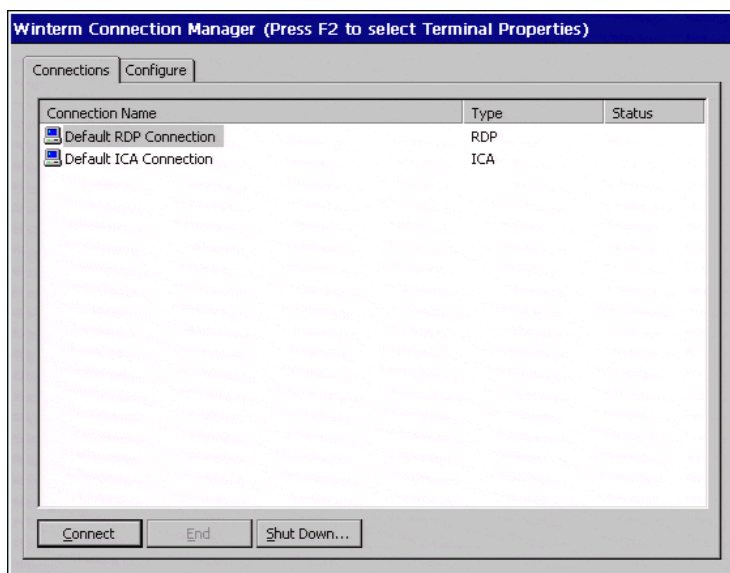 


Figure 5: Connection Manager

Version and Copyright Information

The **General** properties sheet includes information about the current software on your terminal and copyright statements. See Figure 6. The **General** properties sheet is the default for the dialog box.

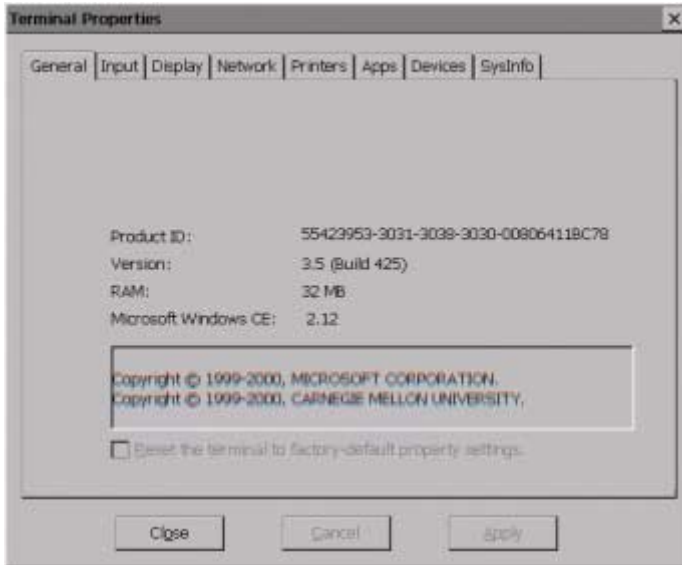 


Figure 6: General Properties Sheet

Read the information on this sheet. Click on **Close** to return to the **Connection Manager**. By default **Cancel** and **Apply** are deactivated.



The amount of RAM shown on this properties sheet depends on the model of terminal use.



CAUTION: There is one function on the **General** properties sheet, **Reset the Terminal to Factory Default Property Settings**. Contact your system administrator before using this function.

Network Information

The **SysInfo** properties sheet contains network information. See Figure 7.

Click on the **SysInfo** tab to invoke this properties sheet. Read the information on this sheet. Click on **Cancel** or **Apply** to return to the **Connection**.

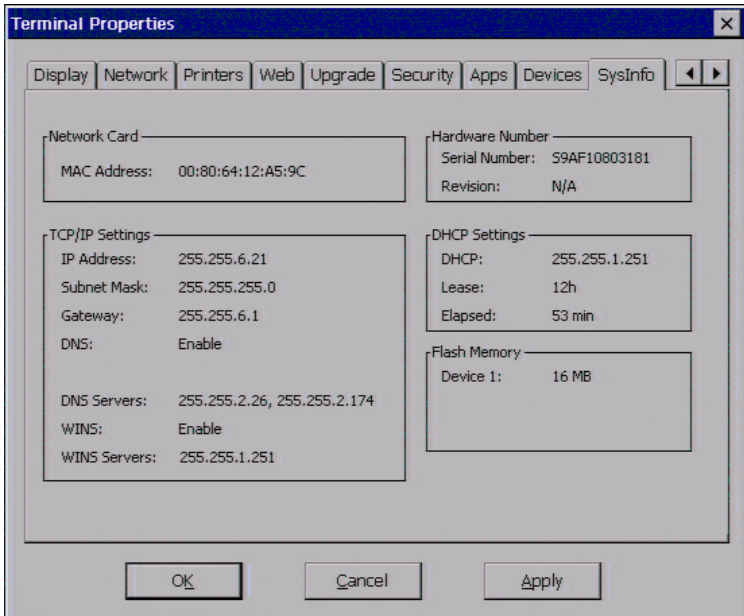 


Figure 7: SysInfo Properties Sheet

Display Configuration

From the **Connection Manager** press **F2** on your keyboard. The **Terminal Properties** dialog box displays (see Figure 1). The **Display** properties sheet available in this dialog box allows you to configure display screen resolution and turn on the energy savers functions.

To invoke this properties sheet click on the **Display** tab in the **Terminal Properties** dialog box.

Display Screen Resolution

This paragraph discusses display screen resolution referring to Figure 1 and using Table 3–1.

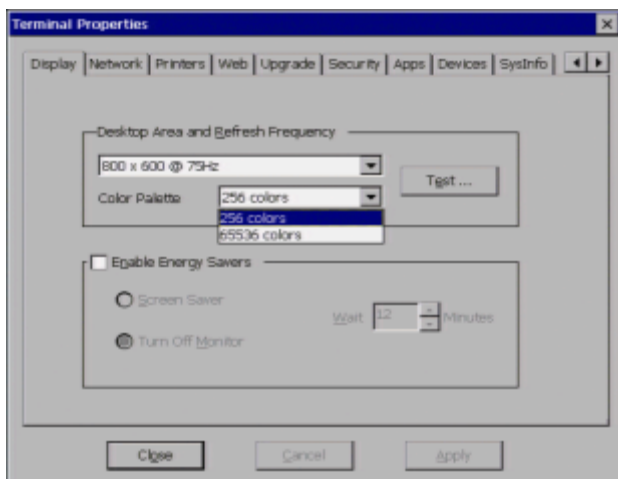 


Figure 1: Display Properties Sheet

Table 3–1: Display Screen Resolution

Display Properties Sheet
Area Called...

 
To Use...

Desktop Area and Refresh Frequency

The Scrolling list box displays the current terminal display screen resolution. Scroll and click on a selection to change the resolution. The default is **640 x 480 @ 60 Hz**.

Test


Click on this command button to test the setting selected in the above scrolling list box. The following dialog box displays:

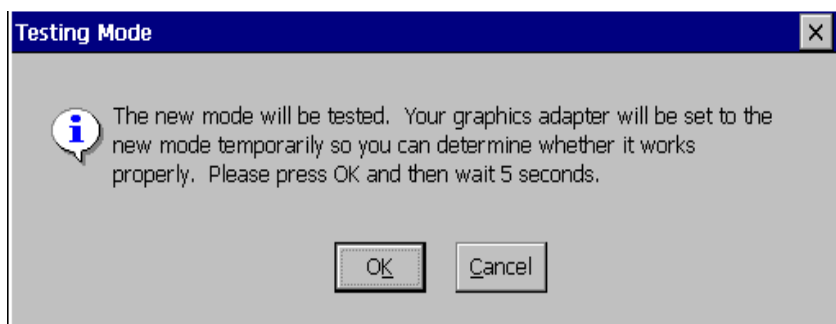

Follow the instructions in the dialog box.
If you click on **OK**, a test pattern will display.
If you click on **Cancel**, the test is cancelled.

Table 3–1: Display Screen Resolution (*Continued*)**Display Properties Sheet**
Area Called...**To Use...**

 After several seconds the following dialog box displays:

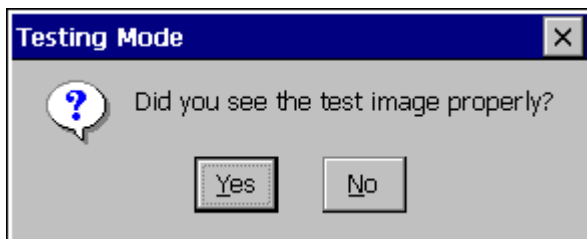

Follow the instructions in the dialog box. If you click on **Yes**, you will return to the **Display** properties sheet.

If you click on **No**, the following dialog box will display:



Follow the instructions in the dialog box.

Energy Savers

This paragraph discusses energy saving features, referring to Figure 1 and using Table 3–2.

Table 3–2: Energy Savers

Display Properties Sheet Area Called...	To Use...
Enable Energy Savers	<p>Click on this check box to activate the energy saver functions. When you check this box, all three functions in the group box are activated:</p> <p>Screen Saver</p> <p>Click on this radio button to enable the screen saver. By default this function is not activated.</p> <p>Turn Off Monitor</p> <p>Click on this radio button to use this function as an energy saver. The function works by shutting off the terminal's display rather than displaying a screen saver. By default this function is not activated. When Enable Energy Savers is activated, this function is enabled.</p> <p>Wait</p> <p>Adjust the amount of time (in minutes) that elapses before the energy saver function you have selected starts. You can enter a number or use the scrolling list. By default the function is not activated. When it is activated, the default is 12.</p>

To finish, click on **Apply**, then **Close**. The following dialog box displays:

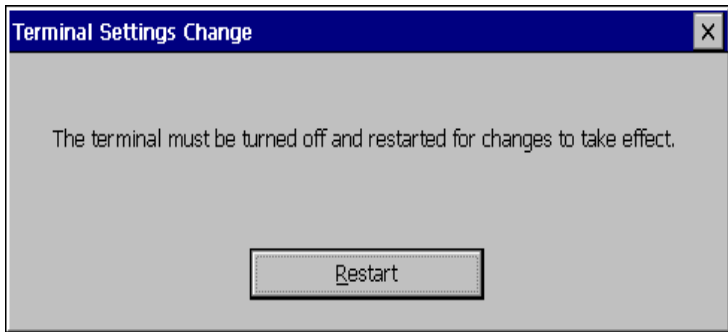 


Figure 2: Terminal Settings Change Dialog Box

You can also click on **Cancel** to cancel any changes and return to the **Connection Manager**.

Keyboard and Mouse Configuration

From the **Connection Manager** you can configure your terminal's keyboard and mouse. Press **F2** on your keyboard. The **Terminal Properties** dialog box displays. In this dialog box is a properties sheet you can use for setting up your keyboard and mouse. It is the **Input** properties sheet. Figure 1 shows this properties sheet.

To invoke this properties sheet click on the **Input** tab.

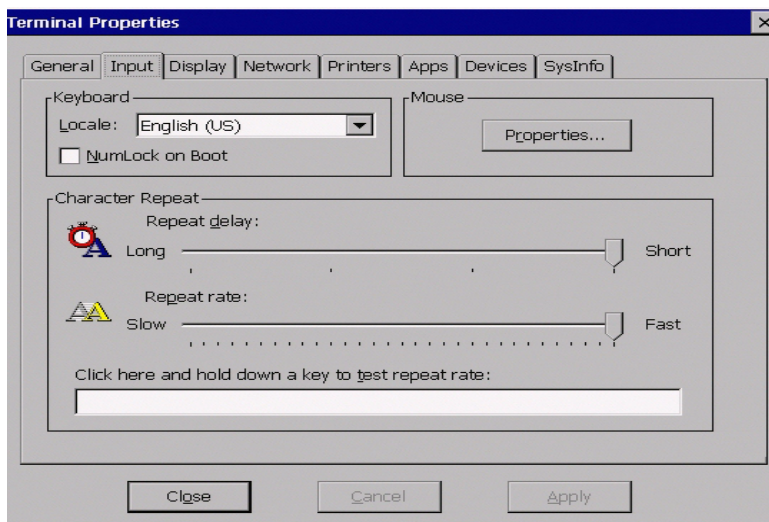 


Figure 1: Input Properties Sheet

Keyboard

This paragraph discusses configuring your keyboard, referring to Figure 1 and using Table 4–1.

Table 4–1: **Keyboard**


Input Properties Sheet Area Called...		To Use...
Keyboard		This group box outlines the keyboard mappings supported by the firmware. Use this group box to configure your keyboard: Locale Use this scroll list to select a language for the keyboard: <div><div><div>■ Belgian Dutch</div><div>■ Belgian French</div><div>■ Brazilian (ABNT)</div><div>■ Canadian Eng (Multi)</div><div>■ Canadian FR (Multi)</div><div>■ Canadian French</div><div>■ Croatian</div><div>■ Czech</div><div>■ Danish</div><div>■ Dutch</div><div>■ English (UK)</div><div>■ English (US)</div><div>■ Finnish</div><div>■ French</div><div>■ German</div><div>■ Greek</div><div>■ Hungarian</div><div>■ Italian</div></div><div><div>■ Italian (142)</div><div>■ Japanese</div><div>■ Latin American</div><div>■ Norwegian</div><div>■ Polish (214)</div><div>■ Polish (programmer)</div><div>■ Portuguese</div><div>■ Romanian</div><div>■ Slovak</div><div>■ Slovenian</div><div>■ Spanish</div><div>■ Spanish Variation</div><div>■ Swedish</div><div>■ Swiss French</div><div>■ Swiss German</div><div>■ Turkish-F</div><div>■ Turkish-Q</div><div>■ US International</div></div></div>
		Click on a selection to highlight it. The default is English (US) .
		An IEPC keyboard is required for any language other than English (US) . The keyboard layouts are different for each of the languages listed above.

Table 4–1: Keyboard (*Continued*)

Input Properties Sheet Area Called...		To Use...
Keyboard (continued)	NumLock On Boot	Click on this check box to enable the Num Lock function on your keyboard. When checked, the keyboard will boot up with the Num Lock function enabled.
	Character Repeat	<p>The group box used to set the keyboard character repeat parameters:</p> <p>Repeat Delay Use this slider control to adjust the repeat delay of keyboard characters. Repeat Delay determines how quickly the same character will appear on screen when typed more than once.</p> <p>Repeat Rate Use this slider control to adjust the repeat rate of a keyboard character. Repeat Rate determines how quickly the same character will appear on screen when the associated key is held down.</p>

To finish, click on **Apply** then **Close** to apply the changes you made and return to the **Connection Manager**.

Mouse

This section discusses configuring your mouse referring to Figure 1 and using Table 4–2.

Table 4–2: Mouse

Input Properties

Sheet Area

Called...

To Use...

Mouse

Use the following dialog box to configure mouse attributes.

Properties

Click on this command button to invoke the **Mouse Properties** dialog box. Use it to set your mouse properties.

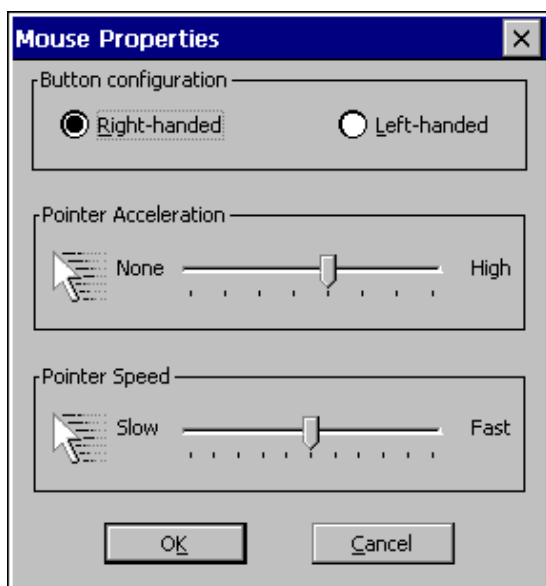 


Table 4–2: Mouse (*Continued*)

Input Properties**Sheet Area****Called...****To Use...**

Button Configuration

Select from:

Right-handed**Left-handed**

To choose which button you will use on your mouse. The default is **Right-handed**.

Pointer Acceleration

Use this slider control to adjust the acceleration of the mouse.

Pointer Speed

Use this slider control to adjust the speed of the mouse.

To finish, click on **Apply** then **Close** to apply the changes and return to the **Connection Manager**.

Managing Connections

The **Connection Manager** is designed to help you manage your network connections. The manager consists of the **Connections** properties sheet and the **Configure** properties sheet. With it you can configure, make, and end connections, and gracefully shut down the terminal.

The **Connection Manager** is automatically invoked when the terminal is turned on.



If you turn on your WBT and the **Setup Wizard** displays, contact your system administrator. If you are a system administrator, see the *Administrators Guide*.

Configuring a Connection

The functions of the **Configure** properties sheet are used to add, modify, and delete connections. See your system administrator or the *Administrators Guide* for more information about configuring connections.


Making a Connection

The functions of the **Connections** properties sheet are used to:

- Make terminal connections
- Display the status of a connection
- End a connection
- Shut down the terminal gracefully

Table 5–1 identifies and describes each of functions of the properties sheet.

Table 5–1: Connections Properties Sheet

Function	Description
Connection Name	<p>This application window lists the connections that you can use. Default RDP Connection and Default ICA Connection are the default connections for the window.</p> <p> See the administrators guide for information about creating connections.</p>
Type	<p>This list shows the type of connection. The defaults are RDP and ICA.</p>
Status	<p>This list shows the status of the connection. If a connection is live, the status for that connection will be Active. If a connection is not live, the list will show a blank.</p>
Connect	<p>Click on a connection in the Connection Name list box to highlight it. Click on the Connect command button to make the highlighted connection. You can also double-click on a selection to make a connection.</p>
End	<p>See Ending a Connection.</p>
Shutdown	<p>See Shutting Down the Terminal.</p>

Ending a Connection

Click on the **End** command button to end the connection process. When you press the **End** button and the connection is active, the **End Task** dialog displays. The **End** command button is enabled when one or more sessions become active.

Shutting Down the Terminal

Use the **Shutdown Window** dialog box to log off, shut down, or shut down and restart the terminal. Figure 1 shows the **Shutdown Window** dialog box.



Figure 1: Shutdown Window Dialog Box

Click on the **Shutdown** command button in the **Connection Manager** to invoke this dialog box. The following table describes the functions of this dialog box.

Table 5–2: Shutdown Window Dialog Box


Function	Description
Logout	Click on this radio button to invoke the Terminal Login dialog box. By default this command button is not activated. You must enable the terminal's security function to activate this radio button.
	 See the administrators guide or your system administrator for more information about logging out.

Table 5–2: Shutdown Window Dialog Box (*Continued*)

Function	Description
Shutdown the Terminal	Click on this Radio button to shut down the terminal without restarting it. A dialog box displays after you initiate this action. It prompts you about whether you want to continue. By default this Radio button is activated and enabled.
Shutdown and Restart	Click on this Radio button to shut down then restart the terminal. By default this function is activated.

Browser Configuration

Compaq *Evo* Thin Client T20 and Compaq T1010 terminals come with a local version of the Microsoft Internet Explorer web browser. This chapter of the *User's Guide* describes how to set the client-based browser as a connection using the **Connection Manager**.

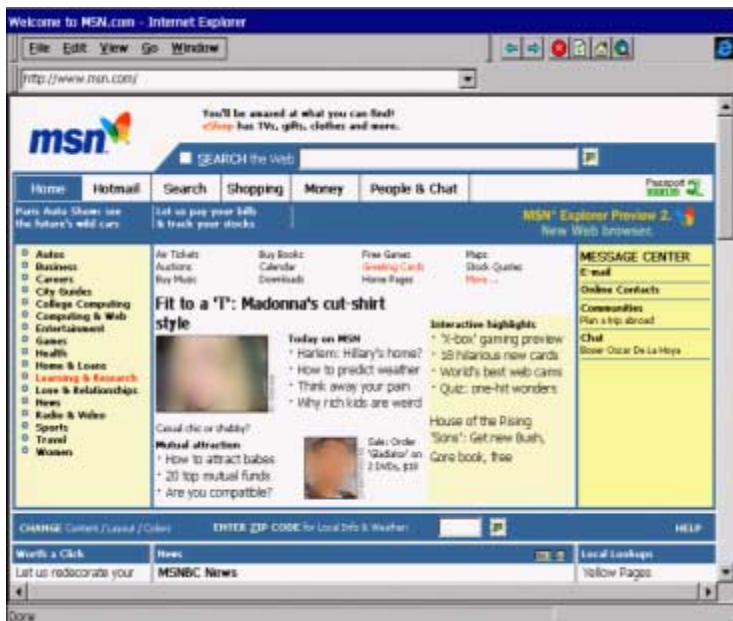 


Figure 1: Internet Explorer Browser

Adding a Browser Connection

When you first power-up your terminal you will see the **Connection Manager**.

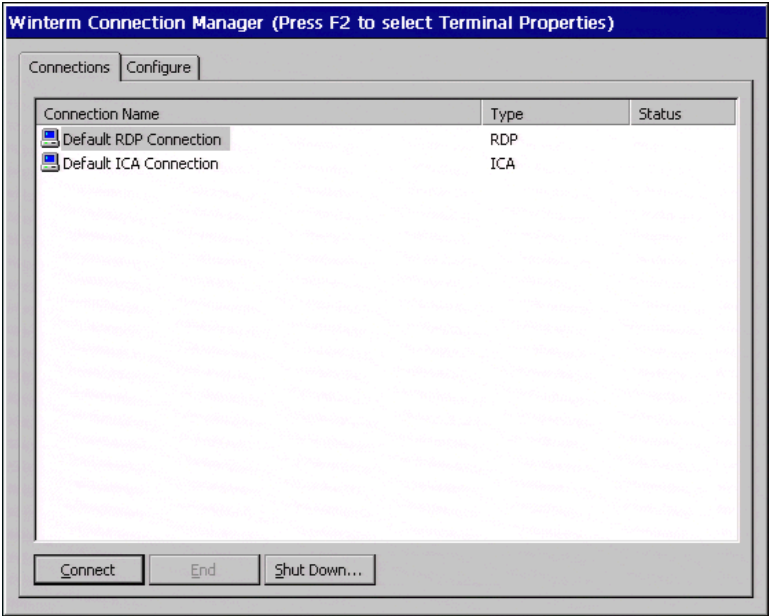 


Figure 2: Connection Manager

It is from the **Connection Manager** that you will configure your local browser. Click on the **Configure** tab to begin setting up your browser.

A new set of buttons will appear at the bottom of the **Connection Manager** window.

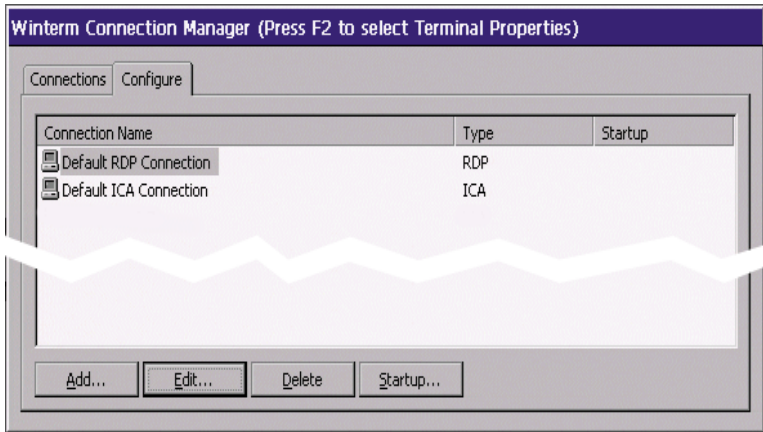 


Figure 3: Configure Tab Buttons

Click the **Add** button and choose Internet Explorer from the drop down box and click on the **OK** button.

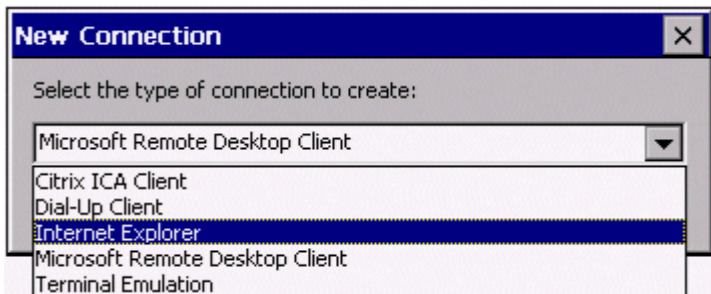 


Figure 4: New Connection Dialog

Type a name for your browser connection in the title box of the **Internet Explorer Setup** dialog box and click **OK**.



Figure 5: Internet Explorer Setup Dialog Box

Click the **Connections** tab at the top of the **Connection Manager** window.

If you want to have the browser automatically open when you start your terminal, click the **Automatically start the selected connection at startup** radio button in the **Connection Startup** dialog box, Figure 6.



Figure 6: Connection Startup Dialog Box

Multiple Sessions

Setting Up Multiple Sessions

To start multiple sessions:

1. Click on a connection in the **Connection Name** list in the **Connection Manager** to launch your first session. (See “Managing Connections” for more information about configuring connection parameters.)
2. Press **Ctrl+Alt+End** while the connection is active to return to the **Connection Manager**.
3. Click on another connection in the **Connection Name** list to launch another session.

Managing Multiple Sessions

Your terminal is designed to handle multiple sessions. The number of active sessions you can have with your terminal is dependent on the following factors:

- Model number
- Amount of RAM
- The types of connections open
- What type of account you have

See your system administrator for detailed information about your terminal’s ability to conduct multiple sessions.

Manipulating Multiple Sessions

With multiple sessions active, you can toggle between sessions. To toggle between sessions:

- Press **Ctrl+Alt+Up Arrow Key** to proceed to the previous session.
- Press **Ctrl+Alt+Down Arrow Key** to proceed to the next session.

You can also return to the Connection Manager by pressing **Ctrl+Alt+End**.

Getting Help

Getting help provides solutions to problems that may occur while you are using your terminal.

Troubleshooting Your Terminal

Troubleshooting the Terminal, Table 8–1, lists some common problems and the solutions to those problems.

Table 8–1: Troubleshooting the Terminal

Problem	Solution
When you turn on the terminal nothing happens.	<ol style="list-style-type: none">1. Ensure that the power cord is connected to the power connector on the terminal's back panel.2. Ensure that the power cord is plugged into an AC outlet that works.
When you turn on the terminal the screen remains blank and the power indicator light remains orange.	Turn the terminal off, then on again.
When you turn on the terminal, the Connection Manager or the WBT Setup Wizard appears, but the mouse does not function.	Ensure that the mouse cord is properly connected.

Table 8–1: Troubleshooting the Terminal (*Continued*)

Problem	Solution
You are not able to make a network connection using the Connection Manager .	<ol style="list-style-type: none">1. Verify that the network cable is properly connected.2. Verify that the network cable is connected to a hub or other network outlet.3. Check with your network system administrator to ensure that the WBT is set up properly.
While connected to a server the keyboard and the mouse freeze.	<p>The connection to the server may be broken.</p> <ol style="list-style-type: none">1. Turn the terminal off, then on again.2. Attempt to make another connection. <p>If you cannot make the connection again:</p> <ol style="list-style-type: none">1. Verify that the network cable is properly connected.2. Check with your network system administrator to ensure that you are using the correct network cable.



If any other error messages are displayed, you have any other problems, or you can not find a solution in this table, contact your network system administrator.

Index

100Base-T 1–5

10Base-T 1–5

A

Access Levels 2–2

Administrator access level 2–2

B

Browser 6–1

C

Configure 5–1

Configure tab 2–4

Connection Manager 2–4

Connection Name 5–2

Connections 5–1

Control keys

 F2 2–1, 3–1, 4–1

D

Dialog boxes

 Mouse Properties 4–4

 Shutdown Window 5–3

 Terminal Login 5–3

 Terminal Properties 2–1,
 3–1, 4–1

 Winterm Connection

 Manager 2–1, 3–1, 4–1

Display Configuration 3–1

Display screen resolution 3–1

E

End 5–2

End Task 5–2

Energy Savers 3–4

Energy savers 3–1

F

Functions

 Character Repeat 4–3

 Connect 5–2

 Desktop Area and Refresh

 Frequency 3–2

 Enable Energy Savers 3–4

 End 5–2

 Keyboard 4–2

 Logoff 5–3

 Repeat Delay 4–3

 Repeat Rate 4–3

 Reset the Terminal to

 Factory Default Property
 Settings 2–5

 Screen Saver 3–4

 Shutdown and Restart 5–4

 Shutdown the Terminal
 5–4

 Test 3–2

 Turn Off Monitor 3–4

 Wait 3–4

G

Guest level access 2-2

H

High-performance terminal
1-3

I

ICA 1-1

Independent Computing
Architecture 1-1

L

Languages 4-2

Logging off the terminal 5-3

M

Mouse 4-4

P

Parallel port 1-5

PCMCIA 1-5

Properties sheets

Configure 5-1

Connections 5-1

Display 3-1

General 2-1

Input 4-1

SysInfo 2-1

R

RAM 2-5

RDP 1-1

Remote Desktop Protocol 1-1

S

Security 2-2

Serial port 1-5

Shutdown 5-2

Shutting down and restarting
the terminal 5-4

Shutting down the terminal
5-4

Status 5-2

T

Terminal features 1-5

Terminal Properties 2-2

TN3270 1-1

TN5250 1-1

Touch screen 1-5

Troubleshooting 8-1

Type 5-2

U

USB port 1-5

User level access 2-2

W

WBT -xxi, 1-1, 1-3

WBT model numbers
3200LE -xxi

Windows 2000 1-1

Windows 3.1 1-5

Windows 95 1-5

Windows 98 1-5

Windows CE 1-1

Windows NT 1-1

Windows-based terminal 1-1,
1-3

Winterm Connection Manager
6-1

Wizards

Setup 2-4

WBT Setup 8-1